


RGB controller


Auto 366 Modes
Power/Play pause
10 levels speed adjust
S+: Speed +
S- : Speed -
366 Kinds mode switching
M+: Mode +
M-: Mode -
these buttons, light strip displays its corresponding colors
Press 5 seconds, remote controls are one to one matching (only this remote control can control it)

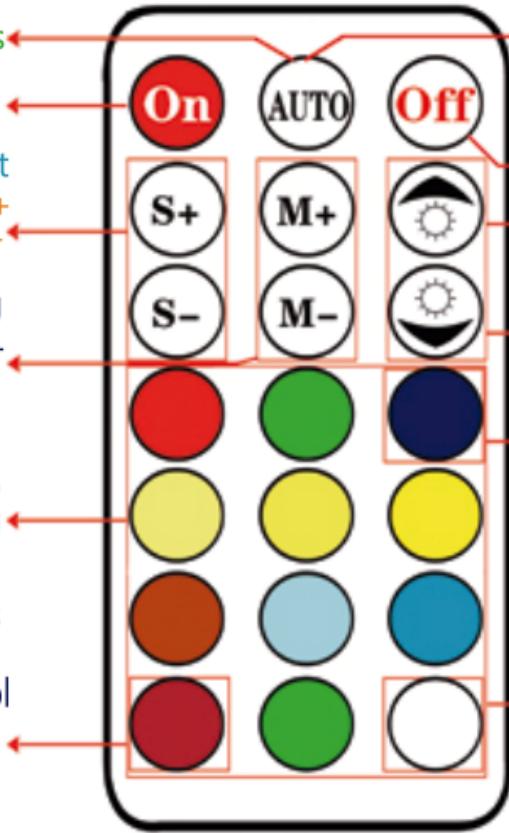

In the off state press this button to enter the setup menu, then press the M+ or M- to adjust LED pixels. Press the blue button to adjust the RGB sequence. After complete setting, press Off to save/exit
Shutdown
Auto save when shutdown
Brightness+
Brightness adjustment (32levels)
Brightness -
RGB sequence adjustment function In the state of shutdown, press the AUTO to enter the setup menu. Now, the first three lights of LED strip display the current RGB sequence. Press this button to adjust the RGB sequence until lights are red, green and blue. Then press the Off button to save.
Press 5 seconds to cancel the remote control matching. All remote controls can control it.

Controlador RGB

Modo Auto
Encender/Reproducir/Pause
Ajuste de velocidad de 10 niveles
S+ :Velocidad +
S- :Velocidad -
Cambio de modo de 366 tipos
M+:Modo +
M-:Modo -
Estos botones, tira de luz muestra su correspondiente colores
Presione 5 segundos, controles remotos son uno a uno (solo este control remoto puede controlarlo)

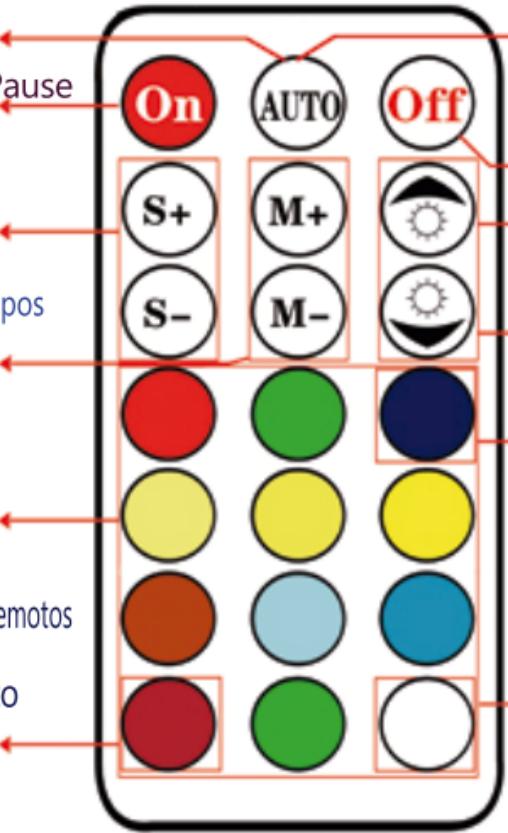

En el estado apagado, presione este botón para ingresar el menú de configuración, luego presione M + o M- para ajustar los píxeles del LED. Presione el botón azul para ajustar la secuencia RGB. Despues de completar configuración, presione Off para guardar / salir
Apagar
Guardado automático cuando se apaga
Brillo +
Ajuste de brillo (32 niveles)
Brillo -
Función de ajuste de secuencia RGB En el estado de apagado, presione AUTO para ingresar el menú de configuración. Ahora, las tres primeras luces de la tira de LED muestra la secuencia RGB actual. Presione este botón para ajustar la secuencia RGB hasta que las luces sean rojas, verdes y azules. Luego presione el botón Off para guardar.
Presione 5 segundos para cancelar el control remoto coincidencia Todos los controles remotos pueden controlarlo.